



Wall Fountain Assembly Instructions

Step-by-Step Installation

1. Select and Prepare the Location

Choose a suitable location for your wall fountain. Ensure the surface is **flat and level** before starting assembly.

2. Assemble the Pump (Before Wall Placement)

The pump must be assembled **before** the fountain is positioned against the wall.

3. Prepare the Pump

- Unpack the pump.
- Attach the suction cups to the feet of the pump (Image 1).
- Place the rubber gasket over the threaded adapter.
- Screw the adapter into the top of the pump (Image 2).

4. Remove the Back Cover

- Using a Phillips screwdriver, unscrew and remove the back cover (Image 3).
- Always remove the **top center or top-left screw last** to prevent the cover plate from falling.

5. Connect the Hose to the Spout

- Inside the fountain opening, connect the hose to the top spout.
- Secure the connection using the provided clamp.
- Run the hose down to the lower section of the fountain.

6. Attach Hose to the Pump

- Connect the other end of the hose to the pump's outlet.
- Secure with the provided clamp (Image 5).

7. Position the Pump

- Carefully place the pump into the basin.
- Ensure the suction cups grip the bottom securely.

8. Fill the Basin with Water

- Add water to the fountain basin up to the **suggested fill line** (check the label inside the basin).
- Always maintain proper water levels to avoid running the pump dry.

9. Plug in the Pump

- Connect the pump's bipolar plug to a **110V GFCI-protected outlet**.
- Do **not** allow the pump to run without water.
- Wait a few seconds for water to begin circulating as pressure builds.



10. Level the Fountain

If water is flowing unevenly, use the built-in adjusters to level the fountain.

11. Adjust Water Flow (Optional)

- Use the regulator located in front of the pump to adjust water flow.
- Turn **clockwise** to decrease flow, **counterclockwise** to increase.
- For more details, consult the Sicce pump manual included.

12. Replace the Back Cover

After confirming proper function and no leaks, reinstall the back panel.

- Do not overtighten the screws.

General Fountain Care & Maintenance

- **Placement Tips:**

Always install on a level, hard surface—**not** directly on grass or soil.
Ensure a properly grounded **110V GFCI outlet** is nearby.

- **Routine Maintenance:**

- Replace water and clean your fountain **at least once per year**.
- Use water and a soft-bristle brush. Add mild detergent or soap without additives if necessary.
- Ideally, clean before winterizing. Use the pump to remove most water, and tip the fountain to drain remaining water. If too heavy to tip, use a cloth to soak up water.

1. Pump mounted



2. Mounted adapter



3. Remove back cover of fountain



4. Hose connected to spout



5. Connect hose to pump

